



Top View - ZIP
Socket numbering

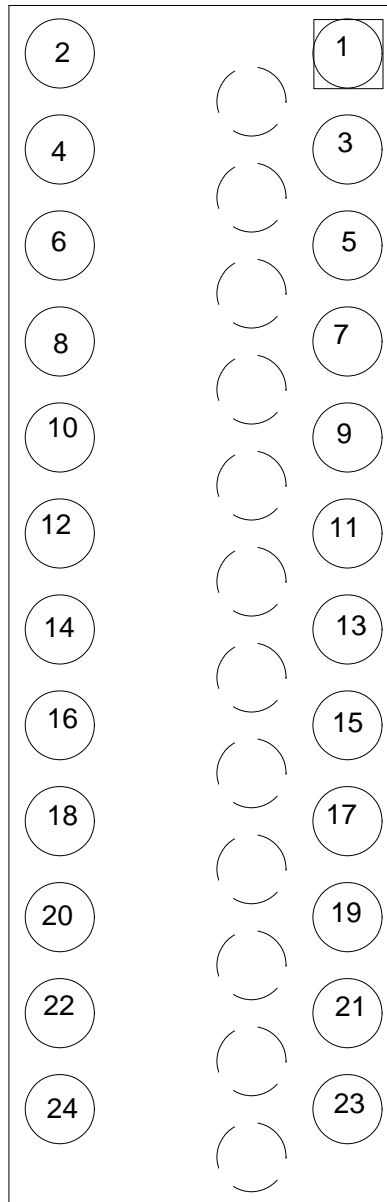

Bottom View - ZIP Socket numbering
mapped to BASE Pins

NOTE: This map is for
adaptor pin assignment
reference only.

It shows the connections
between the socket contacts
and the base pins, as
numbered by Ironwood
Electronics.
The sockets are numbered
sequentially in a staggered
manner from the top. This
may or may not correspond
to the socket numbering of
your package.

PA-ZIP24-01 Map		Status: Released	Scale 5:1	Rev: B
 <p>© 1995 IRONWOOD ELECTRONICS, INC. PO BOX 21151 ST. PAUL, MN 55121 Tele: (651) 452-8100 www.ironwoodelectronics.com</p>	Drawing: P. M. Ilavarasan		Date: 4/27/95	
	File: PA-ZIP24-01 Map, V1			ECO#