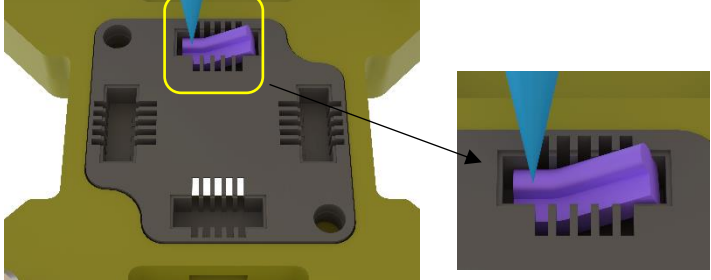
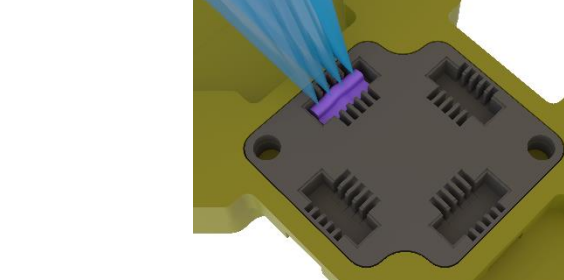
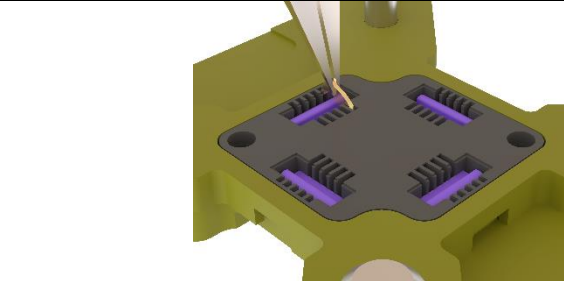
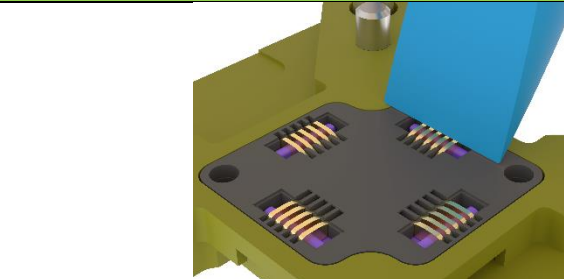


## Ironwood Electronics Inc.

### ATE PicoRaptor 2 Pin Installation Guideline

Step 1	
	<p>Place P-shaped elastomer into the slot.</p> <p>Make sure orientation of elastomer is correct (bulging side facing outward)</p>
Step 2	
	<p>Ensure that the elastomer sits perfectly in the elastomer slot by pushing down on the elastomer with the plastic spudger.</p> <p>Repeat Step 1 and 2 for all the elastomer</p>
Step 3	
	<p>Hold the pin in the correct orientation by using tweezers and insert the pin into the pin slot.</p>
Step 4	
	<p>Once all the pins are installed, press down on all the pins with the plastic spudger to ensure that the pins are sitting firmly with the elastomer.</p>

**\*Note:** For disassembly process, kindly reverse the installation sequence.